







Tue 2.9.25

Job: Annie Green

Plytec Polar White sheen 18mm.
 Arrange holes for Blum pattern. (x3 holes)







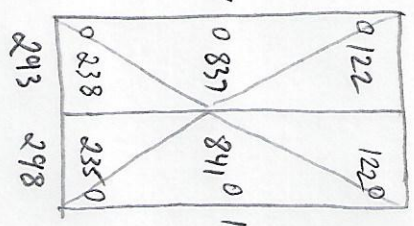


170	3
188	3
188	3
188	3

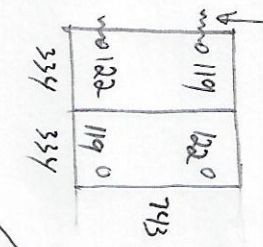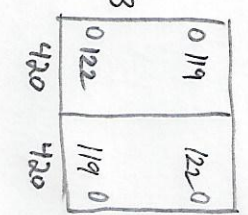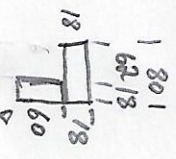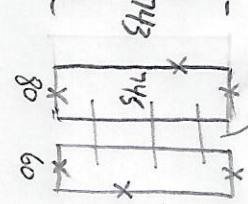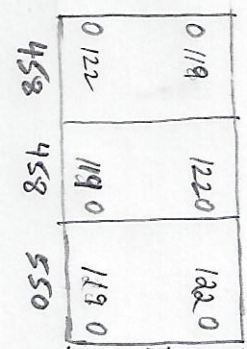

137	3	84H
300	3	199H
300	3	199H

Blind corner hinges

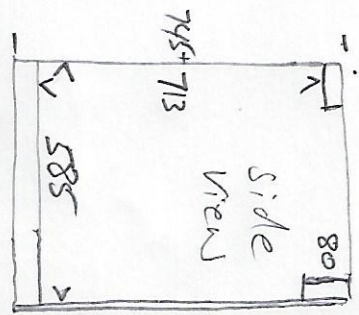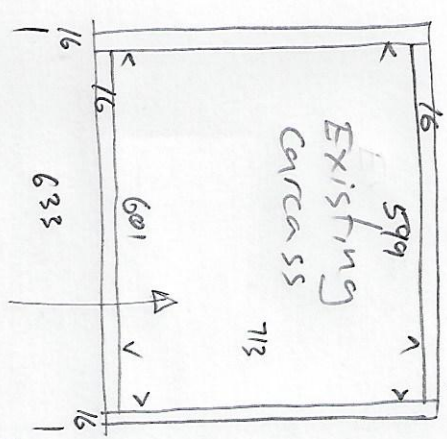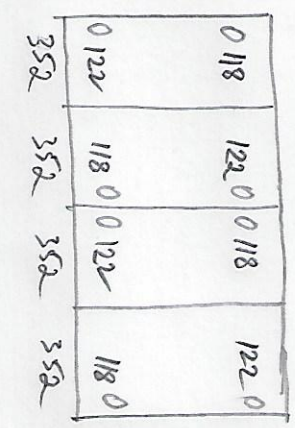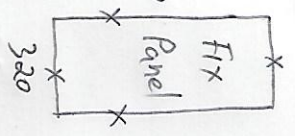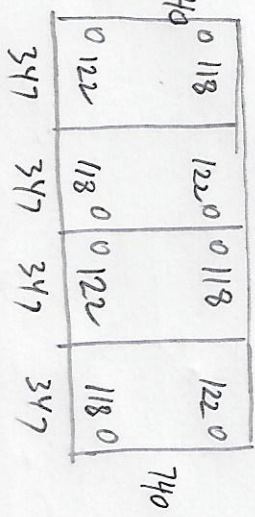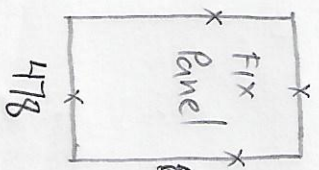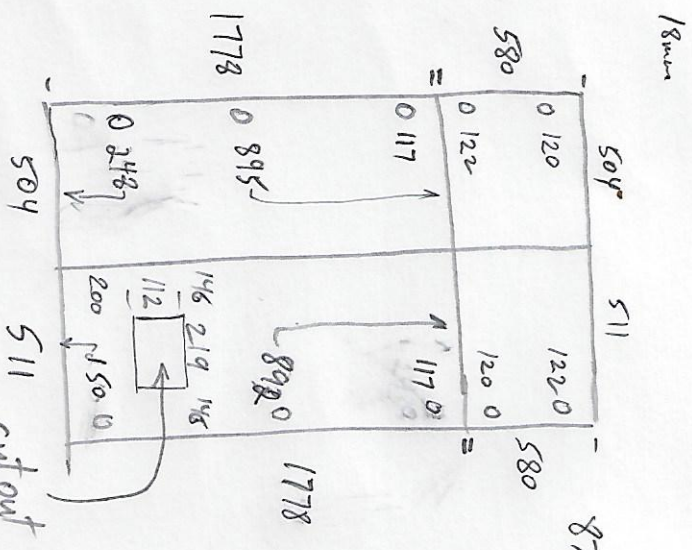

3 New drawers
 Cenux 500 deep
 16mm White template for
 drilling holes on site
 for runners.